



**PS3**®

PlayStation 3

## **Wireless stereo headset**

Instruction Manual

**CECHYA-0080**

## Precautions

Carefully read the information in this instruction manual and on the package before using this product. Also read the instructions for the PlayStation®3 system. Retain all documentation for future reference.

### Safety

- Observe all warnings, precautions and instructions.
- **CHOKING HAZARD** - Contains small parts. Keep out of the reach of small children.

### Use and handling

- Permanent hearing loss may occur if the headset is used at high volume. Set the volume to a safe level.  
Over time, increasingly loud audio may start to sound normal but can actually be damaging to your hearing.  
If you experience ringing in your ears or muffled speech, stop listening and have your hearing checked.  
The louder the volume, the sooner your hearing could be affected. To protect your hearing:
  - Limit the amount of time you use the headset at high volume.
  - Avoid raising the volume to block out noisy surroundings.
  - Lower the volume if you can't hear people speaking near you.
- If you feel that the headset is irritating your skin, stop using it immediately.
- Do not expose the headset to high temperatures, high humidity or direct sunlight.
- Do not put heavy objects on the headset.
- Do not allow liquid or small particles to get into the headset.
- Do not throw or drop the headset or subject it to strong physical shock.
- Do not place any rubber or vinyl materials on the headset exterior for an extended period of time.
- Use a soft, dry cloth to clean the headset. Do not use solvents or other chemicals. Do not wipe with a chemically treated cleaning cloth.
- Do not disassemble or insert anything into the headset because this may cause damage to the internal components or cause injury to you.
- Observe all signs and instructions that require an electrical device or radio product to be switched off in designated areas, such as gas/refueling stations, hospitals, blasting areas, potentially explosive atmospheres or aircraft.
- The battery used in this device may present a risk of fire or chemical burn if mistreated. Do not disassemble, heat above 60°C / 140°F, or incinerate.

### NOTE:

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful

 
interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


You are cautioned that any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## Part names and functions

### FRONT


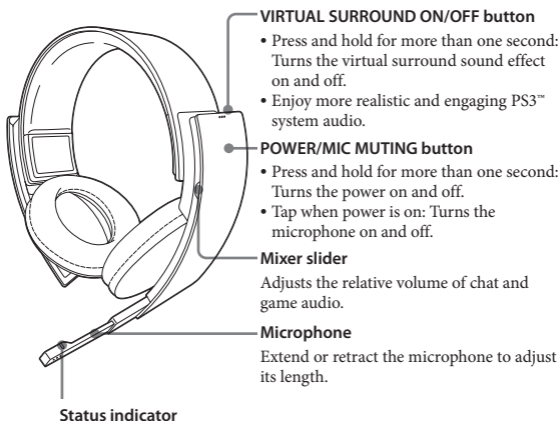


## REAR

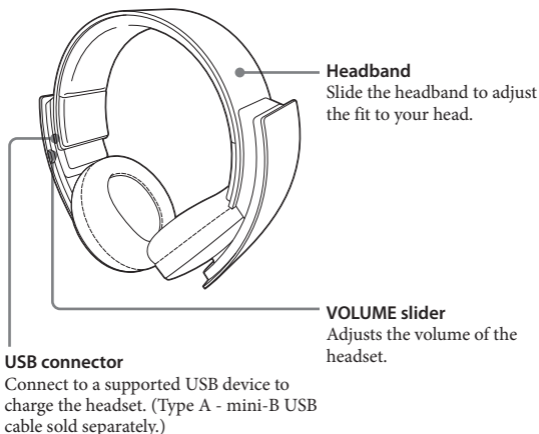 

## Using the headset with the PS3™ system



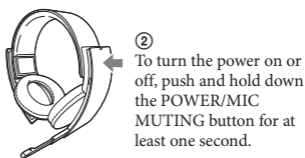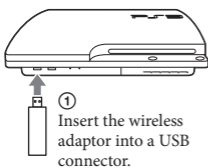  


Compatible with PS3™ system software version 3.70 or later. Only one headset at a time can be used with the PS3™ system.





## Status display

When the headset is used with a PS3™ system, the following status information is displayed in the upper right corner of the screen:



- (1)  Displayed when [Stereo Headset Audio Extension] is set to [On] \*1
- or  Displayed when Virtual Surround is enabled \*1\*2
- (2)  Displays volume level
- (3)  Displayed when the microphone is turned off
- (4)  Displays battery charge level

\*1 To change the audio output, and enable/disable the VIRTUAL SURROUND ON/OFF button and Mixer slider, select  (Settings) →  (Accessory Settings) → [Stereo Headset Audio Extension].

\*2 Some content and applications may not support Virtual Surround. For details visit [eu.playstation.com/support](http://eu.playstation.com/support)

Stereo Headset Audio Extension	Audio Output of Wireless stereo headset	VIRTUAL SURROUND ON/OFF button	Mixer slider
On	All audio	Enabled	Enabled
Off	Chat audio only	Disabled	Disabled

## Charging the Headset

Charge the battery by connecting the headset to a supported USB device such as a PC. While the battery is charging, the status indicator lights up in red. The status indicator turns off when the battery is fully charged.

## Checking the remaining battery charge

To check the remaining battery charge, press the POWER/MIC MUTING button quickly two times while the headset power is on. The status indicator will start to flash red. The number of times the indicator flashes indicates the remaining battery charge.

Status indicator (red)	Remaining battery charge
Flashes three times:	Full
Flashes two times:	Medium
Flashes one time:	Low (needs to be charged)

### Hints

- You might not be able to charge the battery if the USB device or the USB hub does not provide enough power for charging. Try connecting the headset to a different USB device or a different USB connector on the device.
- Charging takes approximately 3 hours when starting with no battery charge left.
- When the remaining battery charge is low, the headset beeps while it is connected and receiving an audio signal.
- It is recommended that you charge the battery in an environment with a temperature of 10°C to 30°C (50°F to 86°F). Charging in other environments might not be as effective.
- If you do not plan to use the wireless stereo headset for an extended period of time, it is recommended that you fully charge it at least once a year to help maintain battery functionality.

### Status indicator display

Indicator colour	Flashing pattern	Headset status
Blue	Solid	In use
	Flashing once repeatedly	Pairing mode
	Flashing twice repeatedly	Connection standby mode
Red*	Solid	Charging
Purple*	Solid	Microphone input off

\* headset only

### Using the headset with a PC

You can use the headset with a PC that has a USB connector. Insert the wireless adaptor into a USB connector on the PC you want to use and turn on the headset.

 
## Hints

- The headset is not guaranteed to work with every PC that has a USB connector.
- The VIRTUAL SURROUND ON/OFF button and mixer slider can be used only when the headset is connected to a PS3™ system.

## Resetting the headset


If the headset does not respond when you try to operate it, reset it by doing the following:

- 1** With the wireless adaptor connected to the PS3™ system, insert a small pin or similar object into the hole for the reset button and press down for at least one second.

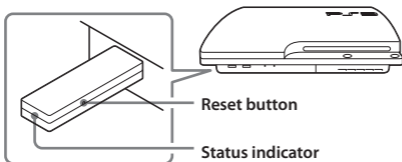

- 2** Insert a small pin or similar object into the hole for the reset button on the headset and press down for at least one second.

 Reset button

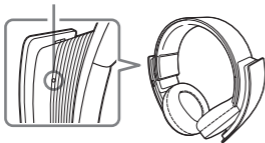

- 3** Press and hold the POWER/MIC MUTING button for at least five seconds.

When the reset is complete, the headset and wireless adaptor will be connected.

## Specifications

<b>Power source</b>	DC 3.7 V: Built-in lithium-ion rechargeable battery
<b>Battery capacity</b>	570 mAh
<b>Operating environment temperature</b>	5°C - 35°C / 41°F - 95°F
<b>Dimensions (w/h/d)</b>	Wireless stereo headset: Approx. 186 × 197 × 95 mm (7.3 × 7.8 × 3.7 in.) Wireless adaptor: Approx. 17.4 × 7 × 64 mm (0.7 × 0.3 × 2.5 in.)
<b>Weight</b>	Wireless stereo headset: Approx. 275 g Wireless adaptor: Approx. 7 g
<b>Communication system</b>	2.4 GHz RF
<b>Maximum communication range</b>	Approx. 10 m* <sup>1</sup>
<b>Use time when fully charged</b>	Up to 7.5 hours* <sup>2</sup>
<b>Contents</b>	Wireless stereo headset (1) / Wireless adaptor (1) / Instruction manual (1)

\*<sup>1</sup> Actual communication range varies depending on factors such as obstacles between the headset and wireless adaptor, magnetic fields from electronics (such as a microwave oven), static electricity, antenna performance, and the operating system and software applications in use. Depending on the operating environment, reception may be interrupted.

\*<sup>2</sup> Actual use time varies depending on factors such as the battery charge and ambient temperature.

Design and specifications are subject to change without notice.

The export, business or commercial use, and rental or leasing of this product are prohibited to the extent allowed by law.

## GUARANTEE

This product is covered for 12 months from date of purchase by the manufacturer's warranty set out in the PS3™ system manual. Please refer to the PS3™ system manual for full details.

---

The wireless stereo headset for PlayStation®3 brings dynamic sound to your entertainment experience. Please note, wireless products may be affected by the presence of other wireless devices in the general vicinity. If you experience any unexpected performance with your wireless stereo headset please contact us before returning it to your retailer. For details visit [eu.playstation.com/support](http://eu.playstation.com/support).

---

The manufacturer of this product is Weifang Goertek Electronics Co., Ltd., Dongfang North Road, Hi-Tech Industry Development District, Weifang, Shandong, China.

The Authorised Representative for EMC and product safety in Europe is Sony Computer Entertainment Europe Ltd, 10 Great Marlborough Street, London, W1F 7LP, United Kingdom.

Distributed in Europe by Sony Computer Entertainment Europe Ltd, 10 Great Marlborough Street, London, W1F 7LP, United Kingdom.



Where you see either symbol on any of our electrical products, batteries or packaging, it indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe. To ensure the correct waste treatment of the product and battery, please dispose of them in accordance with any applicable local laws or requirements for disposal of electrical equipment/batteries. In so doing, you will help to conserve natural resources and improve standards of environmental protection in treatment and disposal of electrical waste.

This symbol may be used on batteries in combination with additional chemical symbols. The chemical symbols for mercury (Hg) or lead (Pb) will appear if the battery contains more than 0.0005% mercury or more than 0.004% lead.

This product contains a battery which is permanently built-in for safety, performance or data integrity reasons. The battery should not need to be replaced during the lifetime of the product and should only be removed by skilled service personnel. To ensure the correct waste treatment of the battery, please dispose of this product as electrical waste.

**R&TTE Directive “Informal DoC” statement**

Hereby, Sony Computer Entertainment Inc., declares that this product\* is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. For details, please access the following URL: <http://www.eu.playstation.com>

\* For details of the model number, please see above.

**In Norway some limitations apply as follows:**

Use of this radio equipment is not allowed in the geographical area within a radius of 20 km from the centre of Ny-Ålesund, Svalbard.

“PS”, “PlayStation” and “PS3” are registered trademarks of Sony Computer Entertainment Inc.



© 2011 Sony Computer Entertainment Inc. All rights reserved.